

USE INSTRUCTION FOR HAND OPERATED FOOD CHOPPER



Place small items to be chopped on cutting board
Grasp body of chopper with one hand; with the other hand, depress the top of chopper repeatedly to chop your item.

CLEANING INSTRUCTIONS FOR HAND OPERATED FOOD CHOPPER



The chopper comes apart very easily for cleaning.
All parts are top rack dishwasher safe. Air dry.
Remove Storage Cover
Turn Clear Plastic Guard from Lock to Unlock Position to remove



Carefully Remove Blade Guide
All pieces are top shelf dishwasher safe

ASSEMBLY INSTRUCTIONS FOR HAND OPERATED FOOD CHOPPER



Carefully Replace Blade Guide and fit the edge of the guide inside the two steel locking mechanisms.



Replace the clear safety guard by lining up the dot on the guard with the dot on the chopper and turning the guard in to the lock position.

Replace Storage Cover

Lifetime Warranty

Robinson Home Products promises to replace any ONEIDA® product sold through Robinson Home Products that breaks during normal household use.

If you have a problem and request a replacement under the terms of the warranty, send the product to:

Robinson Home Products

Product Replacement Services
2615 Walden Avenue
Buffalo, New York 14225

This warranty gives you specific legal rights which may vary from state to state.

Manufactured under license from Oneida Ltd. by Robinson Home Products.

ONEIDA® is a registered trademark of Oneida Ltd., Oneida, New York 13421-2629.



Buffalo, NY 14225
©Copyright 2009
All Rights Reserved
Made in China

®